BRISTOL AIRCRAFT (WESTERN) LIMITED

ENGINEERING MEMORANDUM

STICKING AILERON TRIM TAB INDICATORS									12320			FILE CODE 1 1 1
									IM MEDIA:	Y	-41	
									CTYO, NO.	1		
PART NO.		PART NAME					THE SECOND	Security of Control Co			COPIES	100.
								493 NO.	10			
										ENO.	3	
USE OF EM	DISPOSITION OF STOCK						THE REAL PROPERTY AND ADDRESS OF THE PROPERTY	CUSTOMER'S ORDER NO.		INSPEC	6	
guravėz			6	08	×		9					9
CONCESSION .		CHECK BLOOKS	TO SE	1 E 1	MEMORK	S	NOTED	OFFIGINATED BY	CUSTOMER		PLANKING	0
STOP ORDER/RELEASE		AFFECTED	1 6	Dag	12	65	5 -	1	R.C.A.F.		MAT. CONT.	2
NEW DRAWING		PAIN'S COMPLETED						11 11 - 1	TYPE AIRCRAFT		CONT. ADM.	1
REVISED DRAWING		PARTS IN PROCESS				1 4	4	f-ruffrances	Exp. 3N, NM, 3TM		R.O.A.F.	13
VARIATION		TOOLING					_	B. A. W. PROJ. ENB.	AIRDRAFT REGISTRATION NO.	evidence of the save to be a transfer of the state of the same of		1
OBSOLETE NOTICE	6	RAW MAT'L				16-	1 LA			PILOT	-1/	
USE AS NOTED	10	INTERCHANGEABILITY AFFFORED		STRENGTH AFFECTED			Valocki	DATE DWG	CHANGE			
		YES :	100	YE	S	019	1	D.A. W. INSPECTION	6 June 57 VES	/ ND	DWG. CONT.	3
APPROVALS	i the collection						The control of the co	- Otherac			1.01.	
DIVE FIRE PARTICULARS AND F	WENTERS MORRES	tor mineranna sa	The second second	S. P. P. L.	NI ERIT	13	- Arthurson	CONTRACTS ADMIN.		CUS	TOMER	-

BLEEFER SHERRY FORESCE CMA SEALUGIVARA LAW EVER

Cases occur where the aileron trim tab indicator is sticky in operation and will not respond immediately to movement of the aileron control knob.

The following rectification may be carried out:

- 1. Ensure that the indicator is not fouling the control pedestal.
- 2. If not fouling and still sticky, cut off 3/4 to 7/8 inch of the tension spring, loop the end of the spring and re-install.

It is normally experienced that the indicator will not respond to small movement of the control knob between neutral and R.H. Wing low, and that this is caused by low tension in the spring.

Play in the indicator is not critical providing that the tension spring causes the indicator to move with the control knob and that the indication is correct. In extreme L.H. and R.H. wing low positions it is normal that the control knob can be turned a considerable amount without any indication on the indicator.

Note Cutting of spring is to be carried out only once.

RUN-JUNE-10-195;