

23 Jan 59

DESCRIPTION AND MAINTENANCE INSTRUCTIONS

ANTI-ICER PIPING INSTALLATION

INFORMATION

1 The existing anti-icer piping installation as detailed in EO 05-45B-4, Figure 53, is subject to leakage where the AN816-4D nipple is fitted into the AN927-4D elbow between the pump and the strainer. Outlined hereunder is a scheme whereby a short length of tubing is installed between the elbow and the nipple per-

mitting tightening of fittings without disturbing the position of either pump or strainer.

INSTRUCTIONS

2 To overcome anti-icer system leakage as outlined above, fabricate and install a rigid tube assembly as detailed in Figure 1.

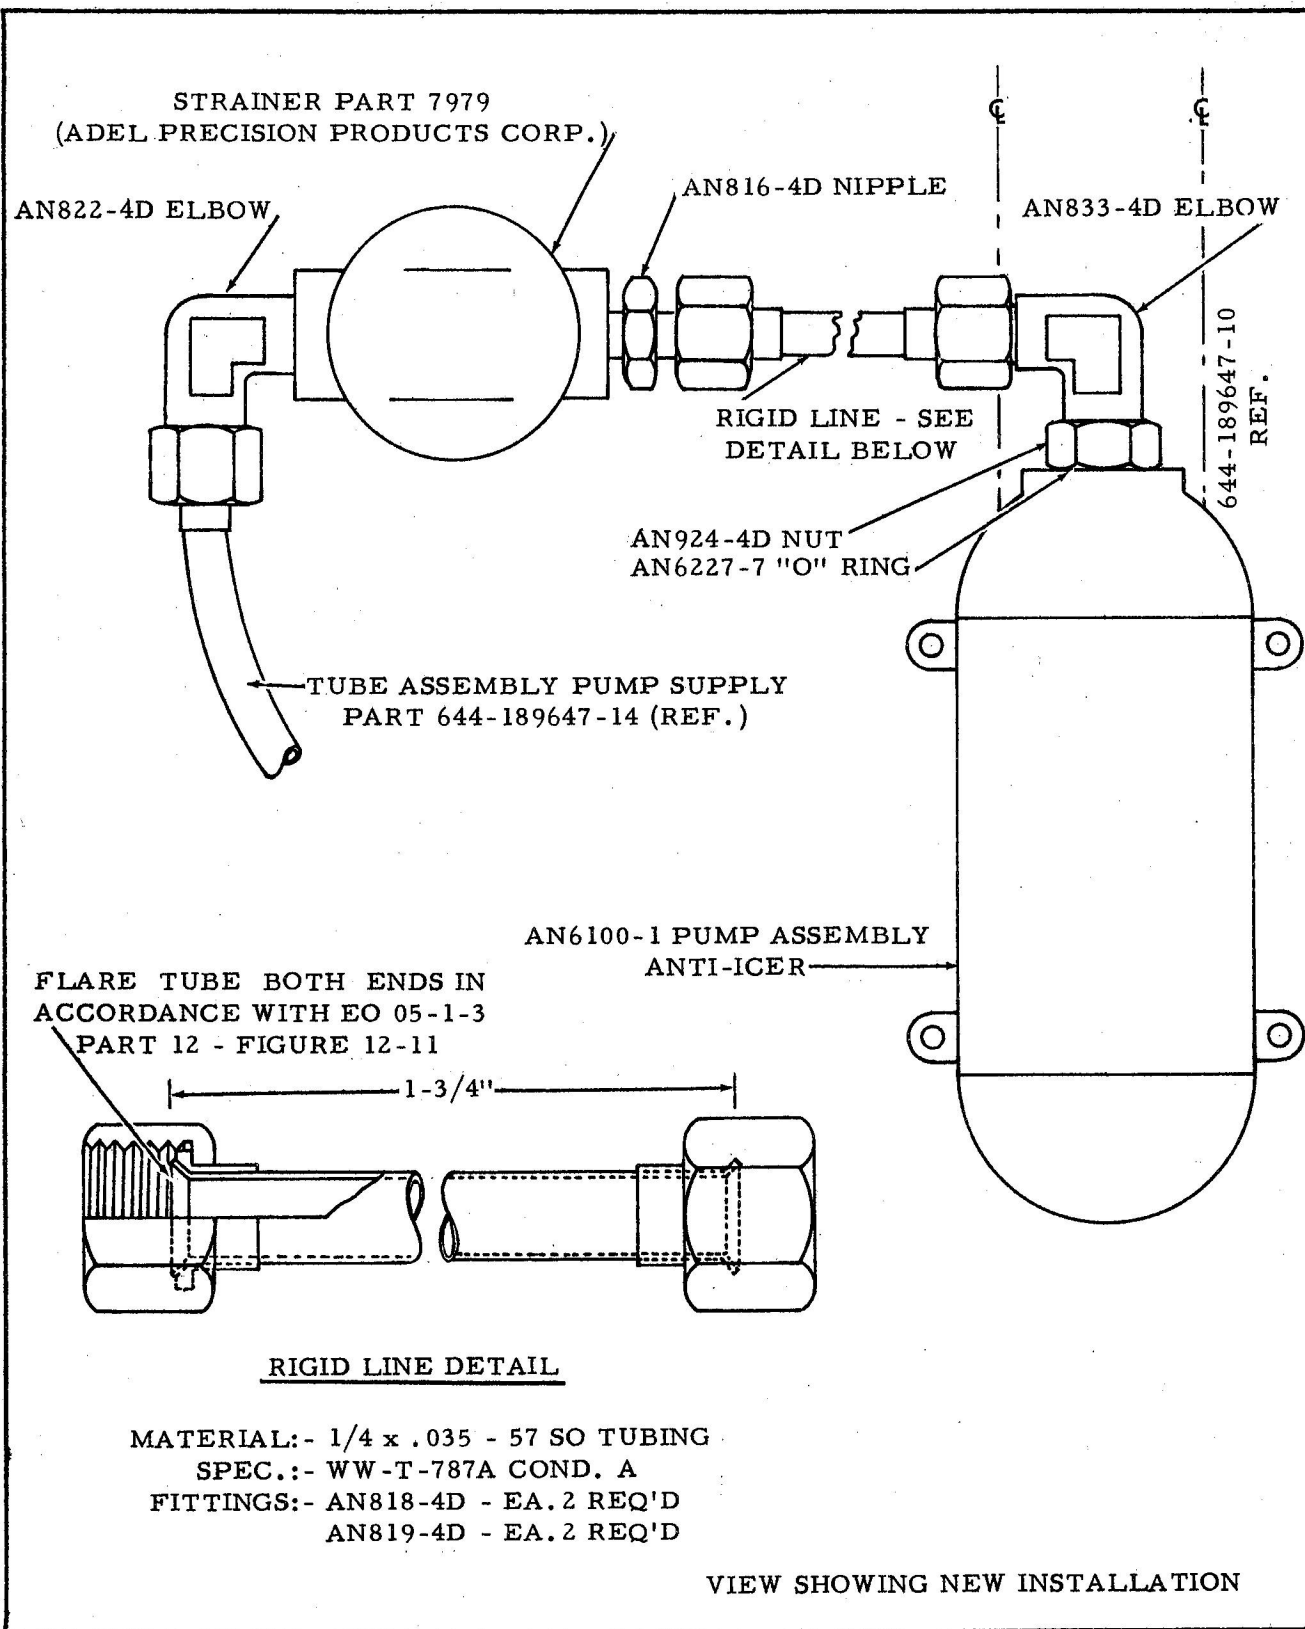


Figure 1

Prepared By:
AMC/SACO/ACR

ISSUED ON AUTHORITY OF THE CHIEF OF THE AIR STAFF